

Digi-Badge™

The NEW self-programmable Message Badge

Speak without saying a word!

- *Self-programmable. No software needed!*
- *Stores 6 messages with instant message switching!*
- *Protective carrying case.*
- *Extra-long battery life. Up to 20 hours!*



Digi-Badge™

 **WARNING!** Powerful magnetic device. Do NOT use with Pacemaker!

Basic Programming

- Step 1: Insert the enclosed battery (CR2032) into the battery slot on the back of the badge.
- Step 2: Turn on the badge by pressing the ON/OFF/Enter button.
- Step 3: Press the Page Up button to access the programming menu. After pressing the Page Up button, a number will be displayed on the screen. This number is the current active message being displayed on the front of the badge.
- Step 4: Press Enter once.
- Step 5: You can now scroll between the following choices:
- SWITCH
 - INPUT
 - SPEED
 - LUMINANCE
- Step 6: To program a new message, select INPUT by pressing the Page UP, or Page Down buttons until you see INPUT displayed on the screen. Press ON/OFF/Enter to begin entering your message.
- Step 7: You will now see the letter "A" appear on the screen. Press the Page UP/Page Down buttons to find the desired letter for your first word.
- Step 8: Once you locate the desired letter, press ON/OFF/Enter once to enter the letter.
- Step 9: To create a space between words, press the ON/OFF/Enter button twice, quickly.

NOTE: In order to create two of the same letters in-a-row, such as "TREE", you must select and enter the first "E", then press Page UP or Page Down to move to another letter temporarily, and then Press Page Up or Page Down to return to "E".

Then press ON/OFF/Enter to enter the second “E”. This is required because if you simply press ON/OFF/Enter twice, you create a space, not a second “E”.

Step 10: When you are satisfied with your message, press the Page Down button for three (3) seconds to store the message into memory. Your message will be the default message displayed on the screen.

Adjusting Message Speed.

Each message can have it’s own preference of Speed. The instructions below will guide you in adjusting speed of each message stored in memory.

Step 1: To adjust the speed of your message, return to the programming menu by pressing Page UP. The number that appears on the screen indicates the current message stored in memory. This is the message that will be adjusted. If you wish to adjust the speed of a different message, press the Page UP, or Page Down button to scroll between the six (6) numbers.

Step 2: After selecting the desired message number, Press the ON/OFF/Enter button to view the available choices. To adjust the Speed of you message, press the Page UP or Page Down buttons until you see “SPEED” appear on the screen. Press ON/OFF/Enter.

Step 3: After pressing ON/OFF/Enter, you will see a number between 1 and 9. The current number on the screen indicates the current speed of your message. Use the Page UP and Page Down buttons to scroll to the desired speed. Press ON/OFF/Enter to accept the new speed value.

Step 4: If you are satisfied with your choice, press the Page Down button for three (3) seconds to store the Speed setting into memory. You should now see your message on the screen with the newly adjusted speed setting.

Adjusting Message Luminance.

Each message can have it’s own preference of Luminance. The instructions below will guide you in adjusting luminance of each message stored in memory.

Step 1: To adjust the luminance of your message, return to the programming menu by pressing Page UP. The number that appears on the screen indicates the current

message stored in memory. This is the message that will be adjusted. If you wish to adjust the luminance of a different message, press the Page UP, or Page Down button to scroll between the six (6) numbers.

- Step 2: After selecting the desired message number, Press the ON/OFF/Enter button to view the available choices. To adjust the luminance of your message, press the Page UP or Page Down buttons until you see "LUM" appear on the screen. Press ON/OFF/Enter.
- Step 3: After pressing ON/OFF/Enter, you will see a number between 1 and 9. The current number on the screen indicates the current luminance of your message. Use the Page UP and Page Down buttons to scroll to the desired luminance value. Press ON/OFF/Enter to accept the new luminance value.
- Step 4: If you are satisfied with your choice, press the Page Down button for three (3) seconds to store the Speed setting into memory. You should now see your message on the screen with the newly adjusted speed setting.

Switching Messages.

The DigiBadge is capable of storing up to six (6) separate messages. The instructions below will guide you in adjusting which messages is displayed on the screen.

- Step 1: To switch messages, return to the programming menu by pressing Page UP. The number that appears on the screen indicates the current message being displayed. Press the ON/OFF/Enter button once, to bring up the menu choices.
- Step 2: Press the Page Up or Page Down buttons until you see "SWITCH" appear on the screen. Press ON/OFF/Enter once. You will see a number between 1 and 6. The current number on the screen indicates the current message being displayed. Use the Page UP and Page Down buttons to scroll to the desired message. Press ON/OFF/Enter to accept the new message.
- Step 3: If you are satisfied with your choice, press the Page Down button for three (3) seconds to activate the message choice. You should now see your message choice on the screen.

Limited Warranty.

Your DigiBadge is a highly sensitive electronic device and as such, needs to be cared for properly. However, if your DigiBadge fails to turn on, or stops working altogether within 90 days of purchase, you may qualify for warranty service, and/or replacement.

To find out if you qualify, contact our support team for evaluation. This may be done by sending an e-mail to: Support@DigiBadge.com. One of our technical support specialists will respond to your issue promptly. If you qualify, you will receive and shipping instructions for warranty service.

Warranty replacement is at the sole discretion of the manufacturer.

©2004 DigiBadge, Incorporated.

872 S. Milwaukee Avenue, #234
Libertyville, Illinois 60048
847-275-1621